

FOOT CONTROLLER

FOR ASHFORD e-SPINNER

On/Off foot control for Ashford Electronic Spinners.

For all e-Spinners manufactured after January 2016 with a foot switch socket in the back panel.

The e-Spinner foot switch allows you to start and stop your e-Spinner without using your hands.

- 1) Simply plug in the cord jack into the socket in the rear panel of your e-Spinner.
- 2) Tap the foot controller to turn your e-Spinner on
- 3) Tap the foot controller to turn your e-Spinner off

The power LED in the ON Switch shows the status of the e-Spinner.

Constant on. The e-Spinner is running OK

Flashing short on / long off. The e-Spinner is in standby, (speed set to ZERO or foot switch OFF). Turn the power switch off if you are going to leave your e-Spinner for any length of time.

Flashing long on / short off. The e-Spinner has a fault, (too much load or stalled motor). Reduce the brake band tension or apply a drop of oil to the front bearing.